


**LIFESTYLE SCREENS CLEAR ALL-WEATHER VINYL COVER - INSTALLATION INSTRUCTIONS**  
**READ THE ENTIRE INSTRUCTION SHEET BEFORE BEGINNING INSTALLATION OF THE COVER**

**TOOLS NEEDED:** 2 Clamps Power drill and 1/8" drill bit Philips screwdriver

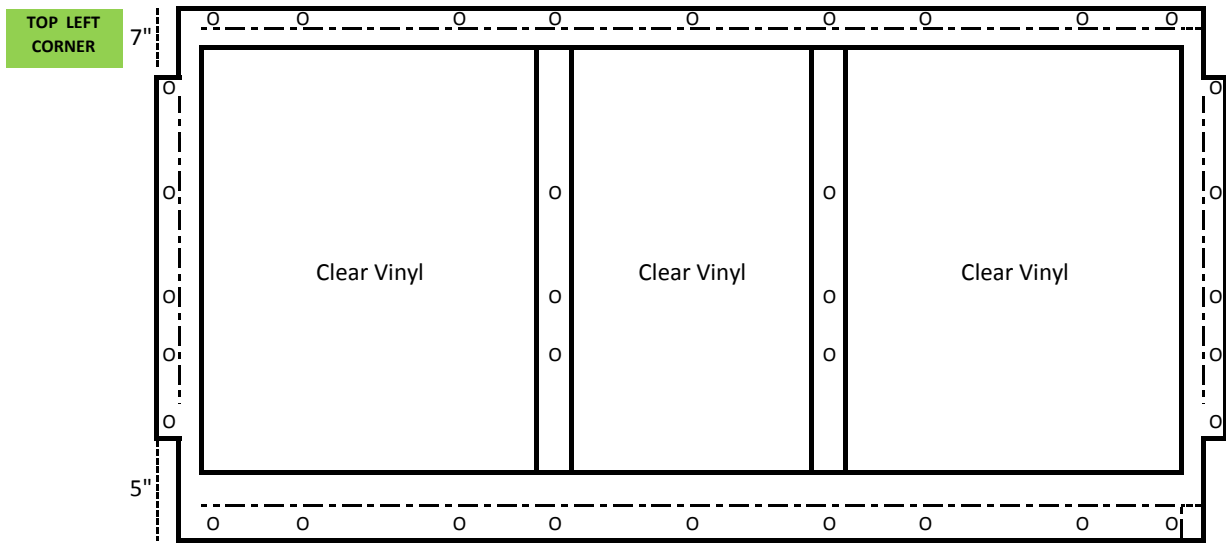

**STEP 1: IF INSTALLING IN COLD WEATHER, BRING THE VINYL TO ROOM TEMPERATURE BEFORE INSTALLING**

**STEP 2: UNROLL AND CLAMP THE COVER TO THE INSIDE OF THE FRAME OF THE LIFESTYLE SCREEN**

The top of the Cover can be identified by the 7" long notches. Bottom notches are 5" long. Clamp the top left hand corner of the Cover to the Lifestyle screen frame. Stretch the top of the Cover across the top horizontal frame member and secure the right top corner of the Cover to the Lifestyle screen frame using the other clamp.

**STEP 3: INSTALL THE CENTER SCREW STUD AND SNAP THE TOP CENTER OF THE COVER TO THE FRAME**

Locate the button snap in the middle of the top border of the Cover. Mark the center of the frame horizontal directly below the center of the middle button snap. Drill a pilot hole on the frame horizontal using the power drill and the 1/8" drill bit. Using the Philips screwdriver, screw one of the screw studs provided with the Cover into the pilot hole that you just drilled. Snap the center button snap on to the center screw stud. Remove clamps. Push Lifestyle Screen to the closed position against the garage door frame.

**STEP 4: INSTALL ALL OF THE SCREW STUDS ALONG THE TOP FRAME AND SNAP THE TOP OF THE COVER ON**

Keeping the top of the Cover taut, starting from the center, work your way across each side of the top border. Install a screw stud on to the frame below each button snap and snap the Cover on to each screw stud as you go.

**STEP 5: INSTALL TWO SCREW STUDS TO EACH CENTER VERTICALS OF THE LIFESTYLE SCREEN**

Similarly, attach the top two (three for 8' tall Covers) of the button snaps found on each of the strips in the center of the Cover. Be sure to keep the Cover taut when marking the locations for the pilot holes. Snap Cover on as you go.

**STEP 6: INSTALL THE CENTER SCREW STUD ON BOTTOM HORIZONTAL FRAME MEMBER**

Locate the center button snap between the two center verticals on the bottom border. Pull Cover taut, mark, drill pilot hole and install the bottom center screw stud. Snap Cover on.

**STEP 7: COMPLETE THE LEFT BAY OF THE LIFESTYLE SCREEN**

Always keep the Cover stretched and taut. Install all of the screw studs down the left outer vertical. Snap Cover on. Install the bottom screw stud on the left center vertical. Snap Cover on. Working from the left center vertical, install all of the screw studs along the bottom horizontal of the left bay. Snap Cover on as you go.

**STEP 8: COMPLETE THE RIGHT BAY OF THE LIFESTYLE SCREEN**

Always keep the Cover stretched and taut. Install all of the screw studs down the right outer vertical. Snap Cover on. Install the bottom screw stud on the right center vertical. Snap Cover on. Working from the right center vertical, install all of the screw studs along the bottom horizontal of the right bay. Snap Cover on as you go.